

thermaltake

TT iTAKE Engine Alexa Skill Settings SOP

Go to www.amazon.com and log in use a Amazon account.

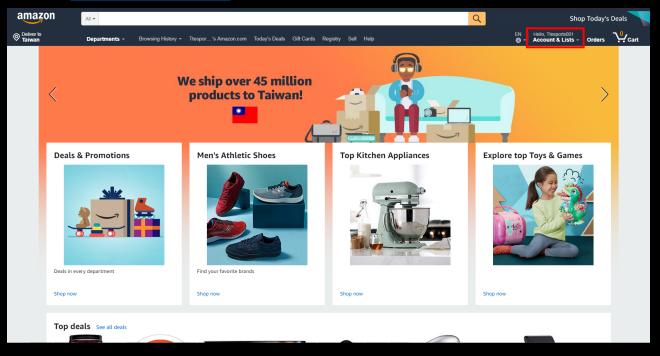


Search "Alexa skills TT RGB Plus" and select this skill.

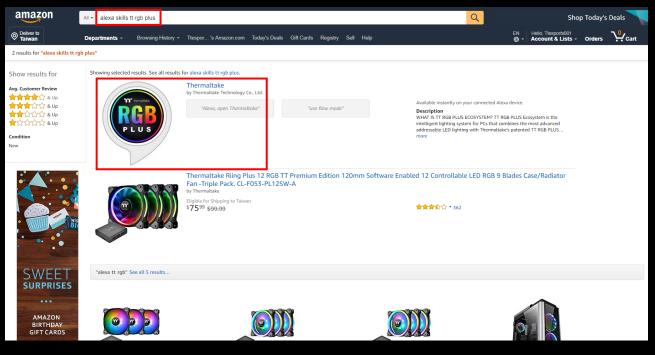



Click "Enable".

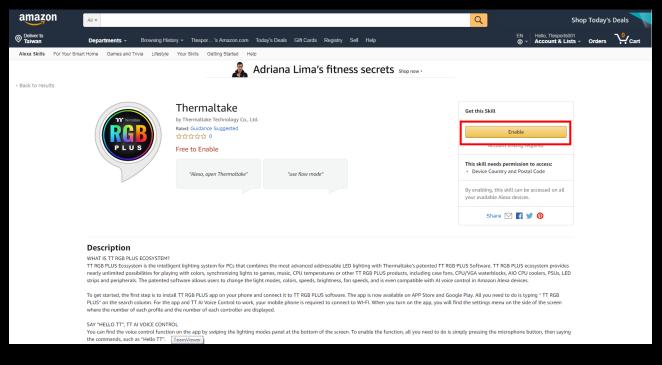

The skill requires access to the country and postal code that is configured with the Alexa device. Please allow and click "Save Permissions".

		Custom \$ Share: f					
amazon	All 🕶				Q Sho		
Deliver to Taiwan							
Alexa Skills For Yo	ur Smart Home Games and Trivia L	Lifestyle Your Skills Getting Started He					
		<u>&</u>	Adriana Lima's fitness	secrets shop now ·			
	PLUS	수수수수수 0 Free to Enable The Dev	I Permissions ermaltake is requesting the following: vice Country and Postal Code w this skill to access the country and postal code co	x onfigured for your Alexa Save Permissions	anage this Skill Disable Skill Link Account Link Account Account linking required bis skill needs permissions verabling, this skill can be accessed on all par available Alexa devices. Share Manage Permissions Share Manage Permissions M		
		e intelligent lighting system for PCs that cor for playing with colors, synchronizing lights atented software allows users to change the is to install TT RGB PLUS app on your phone	s to games, music, CPU temperatures or other T e light modes, colors, speeds, brightness, fan spo e and connect it to TT RGB PLUS software. The e k, your mobile phone is required to connect to V	hting with Thermaltake's patented TT RGB PLUS T RGB PLUS products, including case fam, CPU/V edd, and is even compatible with XI voice contro upp is now available on APP Store and Google PL W-FI. When you turn on the app, you will find th	/GA waterblocks, AIO CPU coolers, PSUs, LED l in Amazon Alexa devices. ay. All you need to do is typing " TT RGB		
					Pop-ups blocked:		×

Notice : Please allow this page to show pop-ups, to launch TT RGB Plus "Login / Sign Up" page.




- Always allow pop-ups and redirects from https://www.amazon.com
- Continue blocking

Manage



Login or sign up the TT account.

TT RGB PLUS ECOSYSTEM

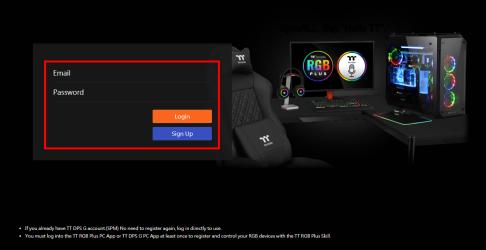

- * If you already have a TT DPS G (SPM) account, there is **NO need to register again**. Please log in using your existing TT DPS G account.
- * You must log into the TT RGB Plus PC App $\$ TT DPS G PC App or iTAKE Engine App at least once to register and control your RGB devices with the TT RGB Plus Skill.

Within iTAKE Engine software, click the settings icon to open a page.

	thermaltake
English	
OFFICIAL WEBSITE / SOCIAL MEDIA	
thermaltake	
SOFTWARE VERSION : v1.0.0	
FIRMWARE VERSION : v25	
MOBILE APP PASSWOR OFF	
🔿 amazon alexa	
ACCOUNT	
PASSWORD	
LOCIN	
Sign Up?	



Use your created or existing account to log in.

		% – ×
	LEVEL 20 ROB	T thermaltake
LANGUAGES English		
official website / social Media		
SOFTWARE VERSION : V1.0.0 FIRMWARE VERSION : V25		
MOBILE APP PASSWOR		
🔿 amazon alexa		
ACCOUNT 0001@thermaltake.com.tw		
PASSWORD		
LOCOUR Login Success		
Sign Up?		

Once the login is successful and Alexa is paired, "Login Successful" is displayed.

						* - ×
					-	thermaltake
				LEVEL 20 RGB		lnermallake
	LANGUAGES					
	English 🔻					
	OFFICIAL WEBSITE / S					
			haale			
	thermaltal	e fac e	ebook.			
	SOFTWARE VERSION	v1.0.0				
	FIRMWARE VERSION					
	FIRMWARE VERSION	425				
	MOBILE APP PASSWO	R OFF				
	-					
	🔿 amazon a	lexa				
	ACCOUNT	0001@thermaltake.	com.tw			
	PASSWORD	•••••				
		LOCOLIT				
		. 200001	Login Success			
		Sign Up?				